


Lobaro Maintenance Tool

The Lobaro Maintenance Tool can be used to configure and diagnose Lobaro IoT devices locally using a PC and a special USB configuration adapter.

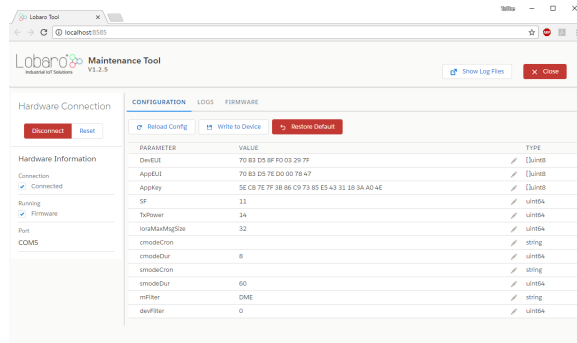

- Features
- System Requirements
- Download & Installation
 - macOS / Linux
 - Windows
 - Physical connection
 - Software connection
- Device Configuration
- Device Logging
 - Restarting
 - Log files
 - Sending to the Device
 - Log parsing
- Updating Firmware
 - Getting the Firmware
 - Installing Firmware
- Changelog

Downloads

- [Lobaro Maintenance Tool Download \(v1.18.4 Windows\)](#)
- [Lobaro Maintenance Tool Download \(v1.18.4 Linux\)](#)
- [Lobaro Maintenance Tool Download \(v1.18.4 Mac 64Bit\)](#)
- [Lobaro Maintenance Tool all versions](#)
- [CP2102 Driver Download](#) Choose:
 - [CP210x Windows Drivers](#) v6.7.6 for Windows 7-8.1,
 - [CP210x_Universal_Windows_Driver](#) for Windows 10 and later

Device config not saved?

When upgrading the Lobaro Tool from version v1.4.x or earlier you have to hit "F5" or "Site full reload" in your browser once the Lobaro Tool started!

Otherwise your device config can not be saved! This is because your browser caches the incompatible frontend from earlier versions.

Supports the PC based configuration of all Lobaro IoT sensors.

It is intended to be used in conjunction with our [USB configuration adapter](#).

Features

- Change static sensor configuration
- Perform firmware updates for your Lobaro devices
- Live monitoring of device diagnostic output
- Save diagnostic output into *.txt file

System Requirements

- Operating system:
 - MacOS X
 - Windows 7/10
 - Linux
- Browser
 - Firefox
 - Chrome
 - Edge



USB Driver

The CP2102 USB driver **MUST** to be installed before using the Lobar-tool.

CP2102 Driver Download

(Choose [CP210x Windows Drivers](#) v6.7.6 for Windows 10, [CP210x_Universal_Windows_Driver.zip](#) for Windows 11)

Download & Installation

macOS / Linux

After downloading the "lobaro-tool" file, e.g. to a directory "lobaro" in your home path. Then make the tool file executable:

```
cd ~/lobaro
chmod +x lobar-tool
./lobar-tool
```



Info

If MacOS shows up a security warning and refuses to start the tool: You can solve this by right-clicking the lobar-tool file, selecting open and overrule the warning.

Windows

After downloading simply start the "lobar-tool.exe" with double click.

Alternatively download the windows installer and start this.



Note

Windows might show up a security warning and ask you to proceed anyway. This behavior is normal.


Physical connection

Connect your Lobar Device to the USB-port of your computer using the [Lobar Config Adapter](#). The 6-pin connector must be plugged into the white rectangular socket on the device that is labeled with the word **CONFIG**. The location of the socket is dependent on the specific device and hardware version you are trying to attach.



Make sure to use the port labeled CONFIG


Some of our devices have multiple sockets the connector fits into. Be sure to use the correct one, the one labeled CONFIG!

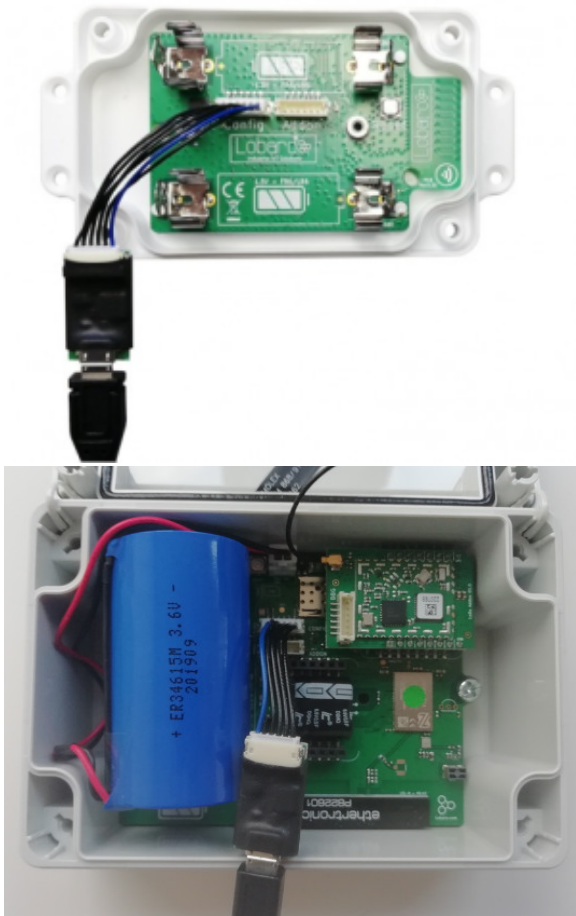

The LoRaWAN Board (left image) can be powered by the config adapter. Other devices, like the NB-IoT /LTE-M boards or the wMBus LoRaWAN Bridge V2, need to be connected to their normal power supply. *If in doubt, just make sure you have the device powered!*

Software connection

When your device is successfully attached to your computer, you can build a connection with the Lobaro Maintenance Tool:

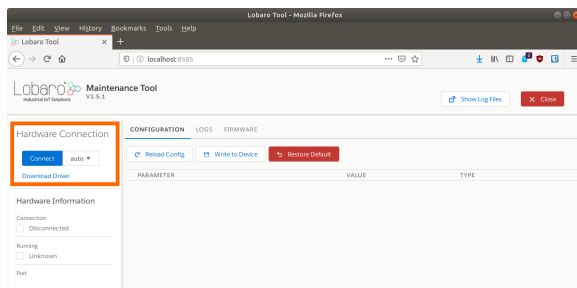

Under *Hardware Connection* select *auto* and click *Connect*, as seen in the screenshot above. If you know to which port the device is connected to your computer (either COM or ttyUSB), you can alternatively select it explicitly instead of using *auto*.



UART Connection

115200 Baud - 8E1 (8 Databits, Even Parity, 1 Stopbit) DTR (Boot): enabled, RTS (Reset): disabled (for starting in firmware mode).

Device Configuration

All messages are displayed in the big text area, each line is prefixed by the time it is received (using the clock of your computer). You can use *Clear Log* to start again with an empty text area. The cleared messages will still be available through the log files that the tool creates.

When starting, our devices print out their current configuration parameter values. Most Devices also have a power on test, that checks if attached sensors can be read successfully. Any Problems that the Device detects will be printed to the log.


Restarting

The *LOGS* Tab also contains a button *Run (reset)*. This button triggers a reboot of the attached device. This can be useful when you start working with your device or if you try to fix issues with connected sensors.

Log files

The logs are also written to files on your computer. Every time you start the Lobar Maintenance Tool, a new log file is created.

When you press the button **Show Log Files**, a file browser is opened at the location where log files are kept.

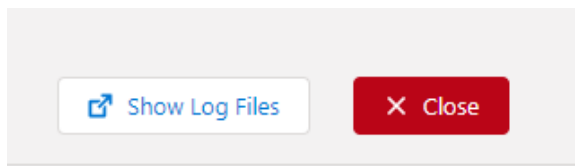

UART Logfiles are located at:

- **Windows:** %homepath%\ .lobaro\logs
- **Linux / Mac:** ~/ .lobaro/logs
- File Name: <DATE>-uart-log.txt

lobaro-tool.log.txt just contains the last lobar-tool console output for debugging issues with the tool.

Sending to the Device

Below the text area is an input field *Send via UART*. Text entered here (and confirmed with Enter) will be sent to the connected Device via UART. Some of our Devices use this feature, for example the [LoRaWAN Modbus Bridge](#) for its interactive Dialog Mode.

Log parsing

If need to parse the log messages of one of our Devices with your own tools, you can connect to it without the Maintenance Tool by using any serial UART reader. You can find the UART parameters at the page for our [Config Adapter](#).

Updating Firmware

Our devices are shipped ready to use with firmware installed on them, so normally you do not need to install firmware yourself. However, over time we sometimes add new features to our devices or fix bugs that come up over time. If you want to use those improvements for devices all ready shipped to you, you can update the firmware yourself.

Firmware updates with our config adapter vs. firmware update over the air (FUOTA)

This page describes how you install firmware on devices that you have physical access to. This can be done for most of our devices, those using LoRaWAN and those using NB-IoT/LTE-M.

Our NB-IoT/LTE-M devices also support installing firmware over the air, without physical access. This can currently only be done by Lobar.

Getting the Firmware


You will need the Firmware you want to install to your device as a file on your computer. You can get the latest Firmware files from this site, the [Lobar Online Documentation](#), on the *Firmware* subpage for your Device. The files are in a format called *Hex* and are therefore also called *Hex-File*. The filename always starts with *app-* and contains the version number as well as a short description of its function and the hardware it is used for. So, for example, *app-nrf9160-wmbus-TZ2-0.3.1-mcuboot-slot0.hex* contains firmware for our wMBus-Gateway on NB-IoT-Hardware (nrf9160) in version 0.3.1.

In some cases you will get a hex-file provided directly by Lobaró, when we develop a specialized solution for you.

Make sure you install the correct Firmware for your hardware!

If you install Firmware for a different hardware you will get unpredictable results.

Installing Firmware

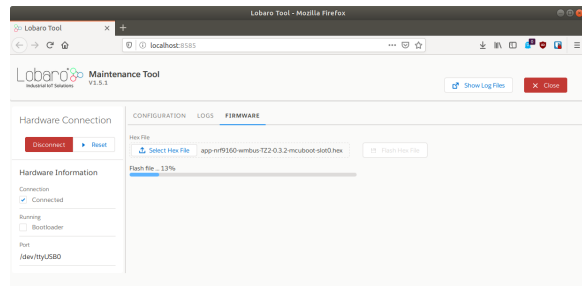

Make sure your Device is successfully [attached to the your computer](#) and the [Maintenance Tool is connected](#), as described above. In the Tab *FIRMWARE* you can select the Firmware file you want to install using the button *Select Hex File*. This will open a file selection dialog, where you can select the hex-file with the Firmware you want to install to your Device. To start installing you need to press *Flash Hex File*. The upload will take several seconds; progress will be displayed by the blue progress bar. It turns green on successful completion. You can verify the installation succeeded and your Device is now running the correct version by checking the *LOGS* Tab.

You should also take a look at the Configuration Parameters. When an update adds new features, there might be new Configuration Parameters to set, or some existing Parameters might work differently. Check the Firmware's Changelog to see what changed between versions and what you have to look out for, for your individual Firmware update.

Changelog